

GARMIN Ltd. or its subsidiaries  
c/o GARMIN International, Inc.  
1200 E. 151st Street  
Olathe, Kansas 66062 U.S.A.

**FAA Approved**  
**AIRPLANE FLIGHT MANUAL SUPPLEMENT**  
**or**  
**SUPPLEMENTAL AIRPLANE FLIGHT MANUAL**  
**for the**  
**GARMIN G5 ELECTRONIC FLIGHT INSTRUMENT**  
**as installed in**

CEAPR DR400/180

Make and Model Airplane

Registration Number: F-GBLH Serial Number: 790

This document serves as an Airplane Flight Manual Supplement or as a Supplemental Airplane Flight Manual when the aircraft is equipped in accordance with Supplemental Type Certificate SA01818WI for the installation and operation of the Garmin G5 Electronic Flight Instrument. This document must be carried in the airplane at all times.

The information contained herein supplements or supersedes the information made available to the operator by the aircraft manufacturer in the form of clearly stated placards or markings, or in the form of an FAA approved Airplane Flight Manual, only in those areas listed herein. For limitations, procedures and performance information not contained in this document, consult the basic placards or markings, or the basic FAA approved Airplane Flight Manual.

FAA APPROVED BY: David G. Armstrong

David G. Armstrong  
ODA STC Unit Administrator  
GARMIN International, Inc.  
ODA-240087-CE

DATE: 7/19/19

© Copyright 2019  
Garmin Ltd. or its subsidiaries  
All Rights Reserved

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin International, Inc.  
1200 E. 151<sup>st</sup> Street  
Olathe, KS 66062 USA  
Telephone: 913-397-8200  
[www.garmin.com](http://www.garmin.com)

**Garmin International, Inc**  
**Log of Revisions**  
**FAA Approved AIRPLANE FLIGHT MANUAL SUPPLEMENT**  
**or**  
**SUPPLEMENTAL AIRPLANE FLIGHT MANUAL**  
**GARMIN G5 ELECTRONIC FLIGHT INSTRUMENT**

REV NO.	PAGE NO(S)	DESCRIPTION	DATE OF APPROVAL	FAA APPROVED
1	ALL	Original Issue	7/22/2016	Robert Murray ODA STC Unit Administrator
2	ALL	Added information regarding G5 DG/HSI.	4/28/2017	Robert Murray ODA STC Unit Administrator
3	ALL	Added interface to 3 <sup>rd</sup> party autopilots.	10/18/2017	Robert Murray ODA STC Unit Administrator
4	ALL	Added note to General section.	10/26/17	Paul Mast ODA STC Unit Administrator
5	ALL	Reformatted document. Updated system messages interface. Added DG/HSI reversion description.	12/20/17	Robert Murray ODA STC Unit Administrator
6	ALL	Added interface description to GAD 13. Added information regarding multiple NAV source inputs.	See Cover	See Cover

Garmin International, Inc.  
Log of Revisions  
FAA Approved AML AND FLIGHT MANUAL SUPPLEMENT  
OR  
SUPPLEMENTAL AML AND FLIGHT MANUAL  
GARMIN G5 ELECTRONIC FLIGHT INSTRUMENT

DATE OF APPROVAL	REVISION	DESCRIPTION	DATE	VER.
12/20/12	1	Original Issue	12/20/12	1
12/20/12	2	Added information regarding 100% engine power	12/20/12	2
12/20/12	3	Added information to 7" display	12/20/12	3
12/20/12	4	Added note to Garmin website	12/20/12	4
12/20/12	5	Added information regarding 100% engine power	12/20/12	5
12/20/12	6	Added information regarding 100% engine power	12/20/12	6
12/20/12	7	Added information regarding 100% engine power	12/20/12	7
12/20/12	8	Added information regarding 100% engine power	12/20/12	8

This page intentionally left blank.

## Table of Contents

<b>Section 1 – General</b>	<b>1-1</b>
Abbreviations and Terminology	1-2
<b>Section 2 – Limitations</b>	<b>2-1</b>
System Software Requirements	2-1
Use of Secondary Instruments	2-1
Kinds of Operations	2-1
<b>Section 3 – Emergency Procedures</b>	<b>3-1</b>
G5 Failure Indications	3-1
Attitude Failure	3-1
Heading Failure, Loss of Magnetometer Data, or Magnetic Field Error	3-1
GPS Failure	3-2
Attitude Aligning	3-2
Attitude Aligning / Keep Wings Level	3-2
Loss of Electrical Power to the G5 Display	3-2
Loss of Electrical Power to the GAD 29B (If Installed)	3-3
Loss of Electrical Power to the GAD 13 (If Installed)	3-3
<b>Section 4 – Normal Procedures</b>	<b>4-1</b>
G5 Power Button and Knob	4-1
Backlight Intensity Adjustment	4-1
Prior to Flight in Instrument Meteorological Conditions	4-1
Autopilot Operations with the G5 HSI	4-2
Course / NAV Selection Coupling to the Autopilot (If Configured)	4-2
Heading Bug Coupling Capability to the Autopilot (If Configured)	4-2
Roll Steering (GPSS) Emulated via HDG Mode (If Configured)	4-2
HSI Source Selection (If Configured)	4-3
<b>Section 5 – Performance</b>	<b>5-1</b>
<b>Section 6 – Weight and Balance</b>	<b>6-1</b>
<b>Section 7 – System Description</b>	<b>7-1</b>
System Messages	7-1



## Table of Contents

1-1	Section 1 – Overview
1-2	Introduction and Terminology
1-3	Section 2 – Limitations
1-4	General Software Requirements
1-5	Size of Development Team/Staff
1-6	State of Development
1-7	Section 3 – Configuration Procedures
1-8	File Name Conventions
1-9	Variable Names
1-10	Section 4 – General Procedures
1-11	General Software Requirements
1-12	Section 5 – Development Procedures
1-13	Section 6 – Testing Procedures
1-14	Section 7 – Deployment Procedures
1-15	Section 8 – Maintenance Procedures
1-16	Section 9 – Appendix
1-17	Section 10 – Glossary
1-18	Section 11 – Index

This page intentionally left blank.

## SECTION 1 – GENERAL

The G5 Electronic Flight Instrument can display the following information to the pilot depending on the installation and location of the G5 instrument.

- Primary attitude
- Primary slip and turn rate information
- Primary heading
- Secondary airspeed
- Secondary altimeter
- Secondary ground track

When installed in place of the attitude indicator, the primary function of the G5 is to provide attitude information to the pilot. When installed in place of the rate of turn indicator, the primary function of the G5 is to provide turn rate and slip ball information to the pilot. When installed in place of the directional gyro, the primary function of the G5 is to provide directional information to the pilot.

### NOTE:

The pilot is reminded to perform appropriate flight and navigation instrument cross checks for the type of operation being conducted.

In case of a loss of aircraft electrical power, a backup battery (optional when installed as a DG/HSI) sustains the G5 Electronic Flight Instrument for up to four hours.

An optional GAD 29B may be installed to provide course and heading datum to an autopilot based on the data selected for display on the HSI.

An optional GAD 13 and OAT probe may be installed to provide measured outside air temperature (OAT) to the G5 for display of true airspeed (TAS), outside air temperature, winds, and density altitude.

This STC allows the removal of the aircraft's vacuum system if it is not required to support any other airframe system.

## Abbreviations and Terminology

The following glossary is applicable within the airplane flight manual supplement

<b>ADI</b>	Attitude Direction Indicator
<b>AFMS</b>	Airplane Flight Manual Supplement
<b>ATT</b>	Attitude
<b>CDI</b>	Course Deviation Indicator
<b>DG</b>	Directional Gyro
<b>DR</b>	Dead Reckoning
<b>FAA</b>	Federal Aviation Administration
<b>GPS</b>	Global Positioning System
<b>GPSS</b>	GPS Roll Steering
<b>HDG</b>	Heading
<b>HSI</b>	Horizontal Situation Indicator
<b>ILS</b>	Instrument Landing System
<b>LOC</b>	Localizer (no glideslope available)
<b>LOI</b>	Loss of Integrity
<b>OAT</b>	Outside Air Temperature
<b>TAS</b>	True Airspeed
<b>VFR</b>	Visual Flight Rules
<b>VHF</b>	Very High Frequency
<b>VOR</b>	VHF Omni-directional Range



## SECTION 2 – LIMITATIONS

### System Software Requirements

The G5 must utilize the following or later FAA approved software versions for this AFMS revision to be applicable:

Component	Software Version
G5 Electronic Flight Instrument	6.20

### Use of Secondary Instruments

The original type design approved instruments for airspeed, altitude and vertical speed remain the primary indications for these parameters.

If the G5 Electronic Flight Instrument is installed in place of the rate of turn indicator, the original type design approved instrument for attitude remains in the primary indication for attitude.

If the G5 Electronic Flight Instrument is installed in place of the directional gyro, the original type design approved instruments for attitude remains the primary indication for attitude.

#### NOTE:

For aircraft approved for VFR-only operations, the G5 Electronic Flight Instrument may be installed as an attitude indicator and rate of turn indicator.

### Kinds of Operations

No Change except for the following:

- When a portable navigation source is selected on the G5, it shall not be used for the primary means of navigation for IFR operations.

## SECTION 3 – LIMITATIONS

### System Software Requirements

The following table lists the minimum system requirements for the AFMS software.

Requirement	Minimum
Operating System	Windows 10
Processor	Intel Core i5-8250U or equivalent
Memory	8 GB RAM
Storage	128 GB SSD
Display	15.6 inch, 1920 x 1080 pixels
Network	10/100/1000 Ethernet
Audio	Speakers and Microphone
Webcam	1080p HD

### Use of Secondary Instruments

The AFMS software is designed to be used in conjunction with the following instruments:

1. Garmin G5 AML STC (AFMS-01112-13 Rev. 6)

2. Garmin G5 AML STC (AFMS-01112-13 Rev. 6)

3. Garmin G5 AML STC (AFMS-01112-13 Rev. 6)

4. Garmin G5 AML STC (AFMS-01112-13 Rev. 6)

5. Garmin G5 AML STC (AFMS-01112-13 Rev. 6)

*This page intentionally left blank.*

### Notes to Operators


The following notes apply to the AFMS software:

1. The AFMS software is designed to be used in conjunction with the following instruments:

## SECTION 3 – EMERGENCY PROCEDURES

### G5 Failure Indications

If a G5 function fails, a large red 'X' is typically displayed over the instrument(s) or data experiencing the failure. Upon G5 power-up, certain instruments remain invalid as equipment begins to initialize. All instruments should be operational within one minute of power-up. If any instrument remains flagged and it is not likely an installation related problem, the G5 should be serviced by a Garmin-authorized repair facility.

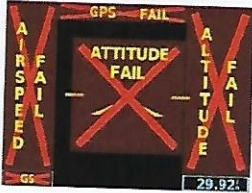

#### Attitude Failure

Attitude failure is indicated by removal of the sky/ground presentation, a red X, and a yellow "ATTITUDE FAIL" on the display.

Rate-of-turn and slip information will not be available.

1. Use standby instruments.
2. Seek VFR conditions or land as soon as practical.

#### Heading Failure, Loss of Magnetometer Data, or Magnetic Field Error

A heading failure, loss of magnetometer data, or magnetic field error is indicated by removal of the digital heading readout, a red X, and a yellow "HDG" on the display.

1. Use standby magnetic compass.

#### NOTE:

If the G5 DG/HSI has a valid GPS signal the G5 DG/HSI instrument will display the GPS track information in magenta.

### GPS Failure

If GPS navigation receivers and/or navigation information are not available or invalid, the G5 will display Dead Reckoning mode (DR) or Loss of Integrity mode (LOI) on the HSI in the lower left corner.

*If Alternate Navigation Sources (ILS, LOC, VOR) Are Available:*

1. Use alternate navigation source.

*If No Alternate Navigation Sources Are Available:*

*If DR is Displayed on HSI:*

1. Use the amber CDI for course information.
2. Fly toward known visual conditions.

*If LOI is Displayed on HSI:*

1. Fly toward known visual conditions.

For aircraft equipped with a GAD 29B interfaced to an autopilot, GPSS will be displayed in amber text when GPSS emulation has been selected from the G5 menu.

1. Deselect GPSS from the G5 menu and select a different autopilot mode.

### Attitude Aligning

During system initialization, the G5 displays the message 'ALIGNING' over the attitude indicator. The G5 will typically display valid attitude within the first minute of power-up. The G5 can also align itself while taxiing and during level flight.

If the "ALIGNING" indication occurs during flight and attitude remains displayed, the attitude display is acceptable for use for flight in instrument conditions. The message will clear when the attitude solution is within the systems internal accuracy tolerances. It is recommended to maintain wings level to reduce the time for the system to align.

### Attitude Aligning / Keep Wings Level

If the "ALIGNING KEEP WINGS LEVEL" indication occurs during flight, the G5 has detected an invalid attitude solution and will not display any attitude information.

1. Use standby instruments to maintain wings level flight. The system will display attitude when internal accuracy tolerances have been met.
2. If attitude does not return, seek VFR conditions or land as soon as practical.

### Loss of Electrical Power to the G5 Display

In the event of a loss of aircraft electrical power to the G5 attitude display, the indicator will continue to function on its internal battery. If an internal battery is installed on the optional G5 HSI, the indicator will continue to function on the internal battery if aircraft power is lost. Internal battery endurance is indicated on the G5 display in hours and minutes. The charging symbol will be removed and the internal battery will not be charged.

In the event the G5 attitude display powers down, the optional G5 HSI will automatically revert to displaying attitude information. It will not revert back to the DG/HSI format if the G5 attitude unit regains power. The DG/HSI presentation may be selected from the G5 menu on the G5 DG/HSI unit after reversion to the attitude display.



### Loss of Electrical Power to the GAD 29B (If Installed)

In the event of a loss of aircraft electrical power to the optional GAD 29B, the heading and course datum will be unavailable to the autopilot and the autopilot may deviate from the intended path or may disconnect. GPS flight plan course information may be displayed on the HSI and VFR will be displayed in amber text on the HSI. GPSS will be displayed in amber text, if GPSS mode is selected.



1. Deselect GPSS from the G5 menu and select a different autopilot mode.
2. Lateral GPS course guidance may only be used in VFR conditions.

### Loss of Electrical Power to the GAD 13 (If Installed)

In the event of a loss of aircraft electrical power to the optional GAD 13, the OAT and TAS indications will be replaced with a red X. The Density Altitude indication will be removed, and "No Wind Data" will be displayed in the wind field.




1. Use an alternate source of outside air temperature to calculate true airspeed, density altitude, and winds.



**Loss of Electrical Power to the GAD 200 (Continued)**



In the event of a loss of electrical power to the GAD 200, the following procedures should be followed. The GAD 200 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 200 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 200 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft.

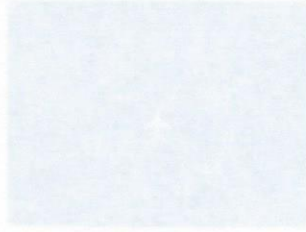

*This page intentionally left blank.*

**Loss of Electrical Power to the GAD 10 (Continued)**

In the event of a loss of electrical power to the GAD 10, the following procedures should be followed. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft.

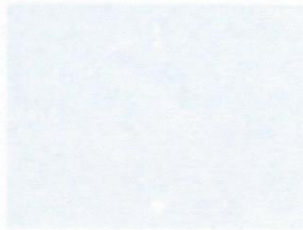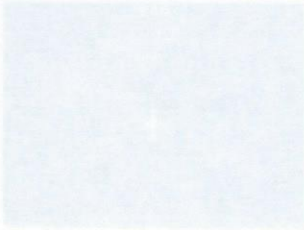

In the event of a loss of electrical power to the GAD 10, the following procedures should be followed. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft. The GAD 10 is a critical component of the aircraft and its operation is essential for the safe flight of the aircraft.

## SECTION 4 – NORMAL PROCEDURES

### G5 Power Button and Knob

The G5 display will power on with the application of aircraft power. The G5 power button is used to turn the display on and off. Press and hold the power button to turn the display off.

The knob performs the following functions:

<b>Press</b>	Press to access the Menu. From the Menu, press to select the desired menu item. Press to accept the displayed value when editing numeric data or selecting from a list. Press to sync the heading or track bug for the HSI.
<b>Turn</b>	From the Menu, turn the Knob to move the cursor to the desired menu item. For the ADI, rotate to adjust the baro setting on the secondary altitude display. For the HSI, rotate to adjust the heading or track bug. Turn to select the desired value when editing numeric data or selecting from a list.

### Backlight Intensity Adjustment

The power up state of the G5 backlight is in Auto adjustment mode.

To adjust the backlighting:

#### To select Manual mode from Auto mode:

1. While the unit is turned on, press the Power button.
2. Turn the knob to manually adjust the backlight intensity.
3. Press the knob to close the backlight page.

#### To select Auto mode from Manual mode:

1. While the unit is turned on, press the Power button.
2. Press the Power button again to select Auto.
3. Press the knob to close the backlight page.

### Prior to Flight in Instrument Meteorological Conditions

1. Press the Power button on the G5 attitude indicator.
2. Verify the battery status indicator is green on the G5 attitude indicator.

## Autopilot Operations with the G5 HSI

The G5 and optional GAD 29B offer various integration capabilities dependent upon the type of autopilot installed in a particular aircraft.

The G5 Electronic Flight Instrument installation in this aircraft provides the following autopilot functions (appropriate boxes will be checked):

- ☐ This installation does not interface with the autopilot (basic wing leveling autopilot or no autopilot is installed in the aircraft).
- ☐ A GAD 29B Adapter is installed in this aircraft.
  - ☐ Course / NAV Selection coupling to the autopilot.
  - ☐ Heading Bug coupling capability to the autopilot.
  - ☐ Roll Steering (GPSS) emulated via heading mode.
- OR
- ☐ Roll Steering capable autopilot (GPSS menu function for emulation not applicable).

### Course / NAV Selection Coupling to the Autopilot (If Configured)

When operating the autopilot in NAV mode, the deviation information from the installed navigation sources (i.e. GPS or NAV) is switched via the navigation source. The NAV source displayed on the HSI is the NAV source the autopilot is following. Many autopilots also use the course datum to determine the best intercept angles when operating in NAV mode.

### Heading Bug Coupling Capability to the Autopilot (If Configured)

When operating the autopilot in HDG mode, the difference between the HDG bug location on the HSI and the actual aircraft heading creates an error signal which the autopilot will minimize by turning in the direction of the bug. If the bug is turned more than 180 degrees, the autopilot may turn the airplane in the opposite direction of the desired turn.

### Roll Steering (GPSS) Emulated via HDG Mode (If Configured)

For autopilots that do not support digital GPSS signals, GPSS functionality may be emulated by operating the autopilot in HDG mode and selecting GPSS from the G5 menu. If the autopilot is already designed to receive roll steering information, the data is transmitted digitally from the navigator to the autopilot.

When GPSS is selected on the G5 menu, the heading bug on the HSI changes to a hollow outline and a crossed-out heading bug appears on the G5 HSI display indicating that the autopilot is not coupled to the heading bug. The bug is still controllable and may still be used for reference.



When GPSS is selected on the G5, GPSS turn commands are converted into a heading error signal to the autopilot. When the autopilot is operated in HDG mode, the autopilot will fly the turn commands from the GPS



navigator. If the GPSS data is invalid (for example, if there is no active GPS leg) or the selected HSI source on the G5 HSI is not GPS, the annunciated GPSS text will be yellow and a zero turn command will be sent to the autopilot.

### HSI Source Selection (If Configured)

For aircraft configured with two navigation inputs to the G5, the desired source may be selected using the G5 knob and menu selection. Press the G5 knob to cycle between the NAV1 and NAV2 input.



### HSI Portable Navigation Device GPS VFR Annunciation (If Configured)

For aircraft configured for a portable navigation device input to the G5, a GPS VFR indicated in magenta will be displayed on the HSI. When the G5 with a portable navigation device is interfaced there is not enough guidance data for IFR use.



The software (STC) installation will be done by the user. The user will be prompted to enter the software license key and the user will be prompted to enter the user name and the user will be prompted to enter the user password.

### STC Source Selection (If Configured)


The software will be installed on the user's computer. The user will be prompted to enter the software license key and the user will be prompted to enter the user name and the user will be prompted to enter the user password.



*This page intentionally left blank.*

### STC Portable Navigation Device GPS WRT Annotation (If Configured)

The software will be installed on the user's computer. The user will be prompted to enter the software license key and the user will be prompted to enter the user name and the user will be prompted to enter the user password.

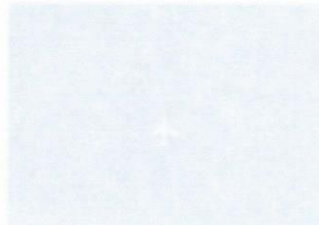



## SECTION 5 – PERFORMANCE

No change.

SECTION 5 - PERFORMANCE

*This page intentionally left blank.*

## SECTION 6 – WEIGHT AND BALANCE

See current weight and balance data.

SECTION 8 - WEIGHT AND BALANCE

THIS SECTION WILL BE LEFT BLANK

*This page intentionally left blank.*

## SECTION 7 – SYSTEM DESCRIPTION

Refer to Garmin G5 Electronic Flight Instrument Pilot's Guide for Certified Aircraft, part number 190-01112-12 Rev A (or later approved revisions), for a description of the G5 electronic flight instrument. This reference material is not required to be on board the aircraft but does contain a more in depth description of all the functions and capabilities of the G5.


The ATT circuit breaker supplies power to the G5 instrument for normal power operation and to charge the internal battery.

The DG circuit breaker supplies power to the G5 instrument for normal power operation when configured as a DG, and to charge the internal battery (if installed).

The HSI circuit breaker supplies power to the G5 instrument for normal power operation when configured as an HSI, and to charge the internal battery (if installed).

The GAD circuit breaker supplies power to the optional GAD 29 adapter and optional GAD 13 adapter for normal power operation.

### System Messages

The G5 has the capability to display system messages to the crew along the bottom of the display. A system message is indicated through a white  indication on the G5.

Messages can be displayed by pressing the G5 knob, and selecting the Message menu item.



(For Reference Only)



The following table shows the meaning of each message. System messages are displayed in white text.

Message	Meaning
<b>External Power Lost</b>	Aircraft power has been removed from the G5.
<b>Critical battery fault! Powering off</b>	Battery has critical fault condition and the unit is about to power off to avoid damage to the battery.
<b>Battery fault</b>	Battery has a fault condition – unit needs service.
<b>Battery charger fault</b>	Battery charger has a fault condition – unit needs service.
<b>Low battery</b>	Battery charge level is low.
<b>Hardware fault</b>	Unit has a hardware fault – unit needs service.
<b>Power supply fault</b>	Unit power supply fault detected – unit needs service.
<b>Unit temperature limit exceeded</b>	Unit is too hot or too cold.
<b>Network address conflict</b>	Another G5 with the same address is detected on the network (most commonly a wiring error on one of the units).
<b>Communication error</b>	General communication error (most commonly appears in conjunction with Network Address Conflict message).
<b>Factory calibration data invalid</b>	Unit calibration data not valid – unit needs service.
<b>Magnetic field model database out of date</b>	Internal magnetic field database is out of date - software update required.
<b>Magnetometer Hardware fault</b>	The magnetometer has detected a fault – unit needs service. Heading data may not be available.
<b>Using external GPS data</b>	GPS data from another network LRU is being used. The unit's internal GPS receiver is enabled, but unable to establish a GPS fix.
<b>Not receiving RS-232 data</b>	The G5 is not receiving RS-232 data from the GPS navigator – system needs service.
<b>Not receiving ARINC 429 data</b>	The G5 is not receiving ARINC 429 data from the navigation source – system needs service.
<b>GPS receiver fault</b>	The G5 on-board GPS receiver has a fault.
<b>ARINC 429 interface configuration error</b>	The G5 ARINC 429 port is receiving information from an incorrect source – system needs service.
<b>Software version mismatch</b>	The G5 attitude indicator and the G5 HSI units have different software. Cross fill of baro, heading and altitude bugs is disabled.

These messages remain while the condition persists.